

# Speaker SP-VA25

## User Manual

Welcome to use portable speaker. For better experience the product, please read the instruction carefully before use.

 
### Safety Warnings:

1. Please don't put the product and accessories nearby fire or other hot environment.
2. Please don't put the product and accessories nearby the water or damp places. Don't use the products near the water. In addition, avoid putting it into any liquid in case that the product and accessories will be damped.
3. Please don't optionally open or tear down the battery accessories.
4. This product needs to use the power adapter (DC 5V, 2A) to charge. After charged, please remember to unplug the power cord or power socket. We suggest stop other operations under the charging mode. Please cut off the power supply first if you need to use it.
5. If you don't need to use it, please switch off the speaker to avoid the loss of power


### Features:

- 1) Output power 25W with 4 inch full range speaker.
- 2) Bluetooth 5.0, which can support sync music play and wireless karaoke.
- 3) Support FM, TF card/USB flash drive play.
- 4) True Wireless Stereo(TWS function).
- 5) UHF Wireless through-wall technology, high sensitivity Moving-Coil microphone, stable signal and clear sound (Only UHF wireless version)

### Function illustration :

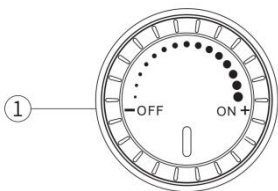


 1. **Power/Volume:** Rotate the knob to on till the display light up to turn on the speaker. During start-up status, rotate the knob clockwise to + to continuously increase the volume; rotate the knob to - to decrease the volume. Rotate the knob to off to turn off the device.

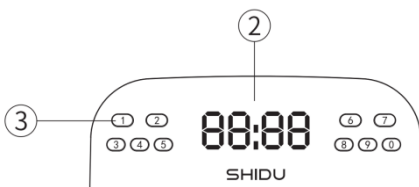

2. **Digital display screen:** Support FM radio frequency display, music play time display.

 3. **Number pad:** Use the number pad to select the playing track in the TF card or USB flash drive, or select the FM channel.

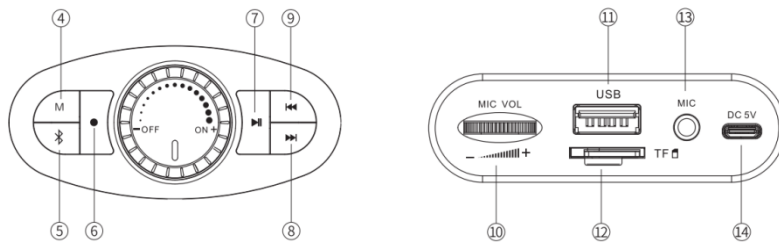

4. **Mode selection:** Short press **M** to select TF card mode/USB flash drive mode/Bluetooth mode/FM mode.

5. **One Key Bluetooth:** Short press this button in any mode to pair the Bluetooth, long press this button in Bluetooth mode to disconnect.

6. **REC Function:**

(1) Connected with wireless or wired microphone, in any mode, long press **•** when the time on the screen began to beat to enter into REC mode to record with inserting storage USB flash drive or TF card (maximum 32GB). After recording, short press **•** again to stop recording and save the audio files and start to play the recordings.

(2) In music mode, short press **•** to enter into recordings play mode with inserting storage (which have recordings). It will play the last recording by default and please press **⏮** or **⏭** button to select the previous and next recordings.

7. **Play/Pause:**

a. In music play mode, short press it to pause; short press it again to play;

b. In any mode, double press the **⏮** button to close the voice prompt of the speaker, and double press the **⏮** button again to turn on the voice prompt of the speaker.

8. **Next:** Short press **⏭** to select next audio file. Long press to fast forward.

9. **Previous:** Short press **⏮** to select previous audio file. Long press to fast rewinding.

10. **MIC volume:** Rotate the knob clockwise to + to continuously increase the volume; rotate the knob to - to decrease the volume.

11. **USB port:** Support USB flash drive play, with a voice prompt USB flash driver playing. Maximum support 32GB USB flash drive with MP3 /WAV /WMA format.

12. **TF card slot:** Support TF card play, with a voice prompt TF card playing. Maximum support 32GB TF card with MP3 /WAV /WMA format.

13. **MIC jack:** Insert the wired microphone with Ø3.5mm plug (The standard package don't include wired microphone).

14. **DC 5V Type-C charging port :** Please use the DC 5V 2A power adapter to charge the speaker.

## TF card/USB flash drive function instruction:

After inserted the TF card /USB flash drive into the slot of TF card /USB flash drive according to the direction of the speaker identification, the speaker will automatically play the music file of TF card /USB flash drive, and the previous song and the next song can be selected by pressing the **⏮** or **⏭** button.

 
## Bluetooth Function:


**Step 1.** Switch on the speaker and press **📶** to enter into Bluetooth mode. (The Bluetooth mode is ready with voice prompt Bluetooth is waiting for connection and **📶** on the screen keep flashing.)

**Step 2.** Turn on the Bluetooth function of your mobile phone and search H6. Click and it will be connected successfully with a voice prompt Bluetooth is connected.

**Step 3.** After successful connection, it can play the audio files.

## True Wireless Stereo function

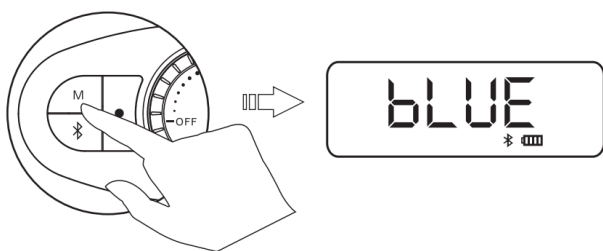




Step1: Switch on two speakers and both press  to enter into Bluetooth mode. Long press **M** of one speaker to enter into pairing status, when Bluetooth icon of another speaker stop flashing, which means this two speaker connected successfully.

Step2: Turn on the Bluetooth function of your device and search H6. Click and it will be pair successfully. Two devices will play simultaneously.

Step3: Long press **M** of one speaker to exit this function.

### FM Function:

 
Switch on the speaker, short press **M** to choose the FM mode with the screen showing radio frequency; Long press " " to enter into automatic channels searching, after searched successfully, the device will save the channel automatically. Please press " " or " " to choose the saved channels.

### About speaker charging:


If the battery icon on the screen flash continuously, indicating that the battery is low, please charge it in time. Connect the accessory USB charging cable to the speaker's DC5V charging port, the other end connects with DC5V 2A charger to charge. The battery icon keeps flashing when charging, and the battery icon stays on when fully charged.

Please unplug the adapter timely after fully charged, the charging time is normally 4-6 hours.

**Note:** In order to achieve the best effect when using the speaker for the first time, it is recommended to be fully charged before use.

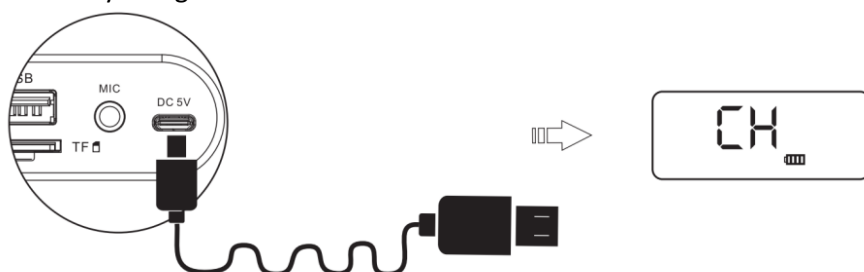

### Headset Wireless Microphone Operation: (Limited to Headset wireless Microphone version)

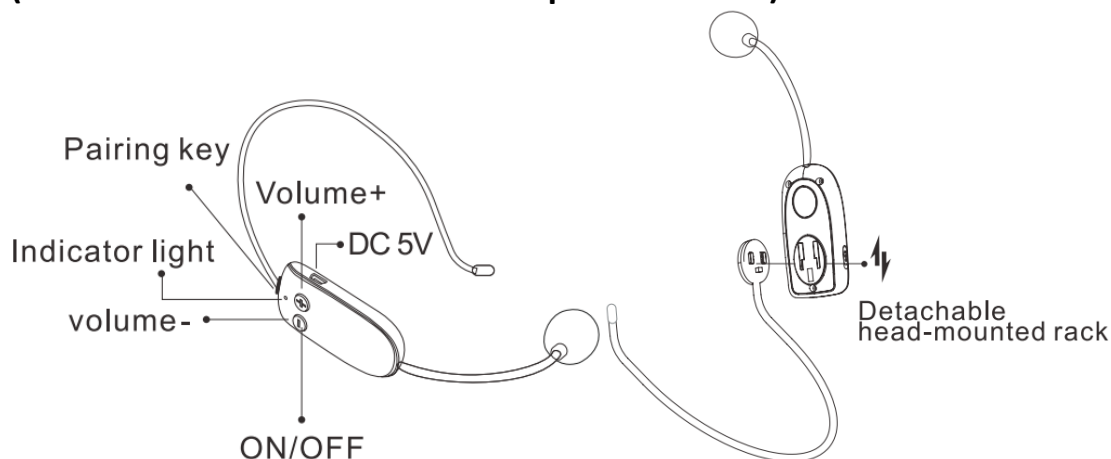 


## How to pair the MIC and receiver manually:

**Step 1:** Switch on the microphone, long press  pairing key on the top for 3 seconds, and the blue indication light will keep flashing.

 
**Step 2:** Switch on the speaker and wait for 10 seconds, the blue indicator light will stop flashing after paired successfully.

**Step 3:** Test whether the wireless microphone work with speaker.

**Notes:** When using the wireless microphone, short press + to increase the microphone volume and short press - to reduce the microphone volume. Long press  to disconnect wireless microphone. Repeat step 1 and step 2 to pair wireless microphone manually.

## How to disassemble & install the wireless microphone:


① Push up

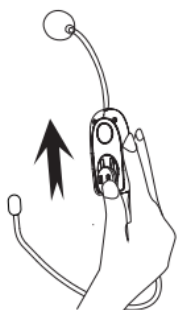

②



 ③ Push down

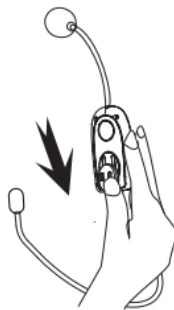

④



## How to charge the Wireless Microphone:

When the blue light of the wireless microphone flashes continuously, it indicates microphone is in low battery.

Please push the switch to OFF state to close the microphone, connect one end of Type C connector to the DC 5V interface of the microphone, and connect the other end to the charger to the power socket. The red indicator light will be lighting stably when charging, and it will auto-turn off when fully charged.

### Specification:

Model: -----H6

Power output: -----≤25W

S/N ratio: -----≥85db

Frequency response: -----80Hz-20KHZ

Charging voltage: -----DC 5V 2A

## Troubleshooting:

Trouble	Possible reasons	Measures
Switch on the speaker but no sound	1..No audio input	Please use another better audio files.
	2.Haven't turned on the volume	Please adjust the volume properly.
With sound distortion	1.The volume is too high	Please turn down the volume.
	2.The speaker is broken	Please contact us for maintenance.
No sound with Karaoke	1.Haven't inserted the wired MIC properly	Please insert the wired MIC properly.
	2.Haven't switched on the MIC	Please turn on the MIC.
	3.Haven't turned on the MIC volume on the speaker	Please adjust the volume properly.
	4.The wireless MIC is low battery	Please charge the mic timely.

No sound with MP3 playing	1.The audio's format in USB flash drive or TF card is wrong	Please turn the format to MP3.
	2.Chaotic procedure with wrong operation	Please restart the speaker.
	3.Haven't inserted the USB flash drive/TF card properly	Please insert the USB/TF card properly.
Can only work several minutes after charged	1.The battery is broken	Please contact us.
	2.The connecting cable of battery is loosened or disconnected	Please contact us.
	3.Hasn't full charged the speaker	Please full charge it before using.



**MADE IN P.R.C. FOR  
SPACETRONIK SP. Z O.O.  
UL. WIŚNIOWA 36, 64-000  
KOŚCIAN, POLAND  
INFO@SPACETRONIK.EU  
SPACETRONIK.EU**



**RoHS**  
MADE IN P.R.C.

#### WASTE DISPOSAL

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Hereby Spacetrnik Sp. z o.o declares under its sole responsibility that the product SP-VA25 is in conformity with following directives: MD (2006/42/EU), EMC (2014/30/EU), LVD (2014/35/EU), RoHS (2011/65/EU + 2015/863/EU). Full document (declaration of conformity) is available for download from website [spacetrnik.eu](http://spacetrnik.eu).

The WEEE symbol (the crossed-out wheeled bin) using indicates that this product is not home waste.

Appropriate waste management aids in avoiding consequences which are harmful for people and environment and result from dangerous materials used in the device, as well as improper storage and processing. Segregated household waste collection aids recycle materials and components of which the device was made. In order to get detailed information about recycling this product please contact your retailer or a local authority.

Made in P.R.C for: Spacetrnik Sp. z o.o.

ul. Wiśniowa 36, 64-000 Kościan, Poland

[info@spacetrnik.eu](mailto:info@spacetrnik.eu)

[spacetrnik.eu](http://spacetrnik.eu)